

Beverages: Air Compressors

Card No. BE000

Drain Air Compressor

Frequency

Monthly

Models

Air Compressors - Multiplex

Time Taken to Complete

5 Minutes

Health & Safety Hazards



Slippery Floors / Tripping

Food Safety



Wash and dry hands **after** performing this task



Inspect equipment. Do not use if damaged

Equipment





1




2

- 1 Bucket
- 2 Blue Border Cloth

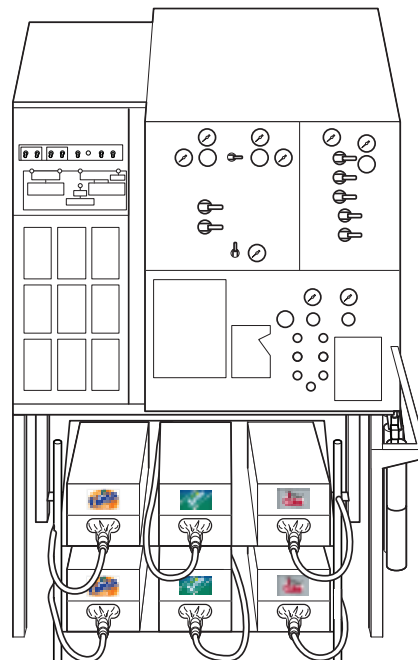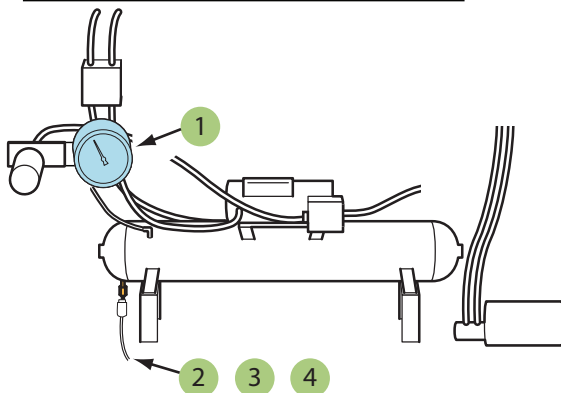


1

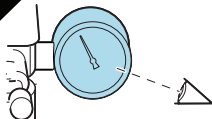

Visually check the Pressure Gauge to ensure there is pressure in the tank 55-65 psi (1 bar=14psi). There must be pressure in the Receiver Tank to aid in draining any moisture from the tank.

2


Place the container under the outlet of the Receiver Tank drain valve and wrap a Blue Border Cloth around the end of the Valve.
NB The towel will prevent moisture and accumulated debris from being blown around the area while draining the Receiver Tank.

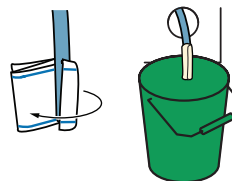


3

Open the Drain Valve slowly by turning the Hex Bolt anti-clockwise until air and moisture can be purged from the tank.
NB This should only take approximately 2 mins.

NB The Drain Valve will require approximately 1/4 turn to allow for draining and purging of the Receiver Tank.

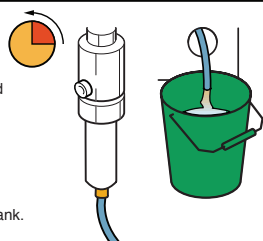

4

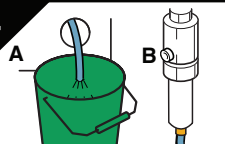

Check the discharge from the Drain Valve (A) for moisture. When there is no moisture being discharged from the Drain Valve, close it by turning Hex Bolt clockwise (B).