

Holding Units: Universal Holding Cabinet

Temperature Calibration

Frequency

Monthly

Models

Frymaster Universal Holding Cabinet

Estimated Time to Complete

30 Minutes

Health & Safety Hazards



Hot Surfaces

Food Safety



Critical Control Point




Inspect equipment. Do not use if damaged




Wash and dry hands **after** performing this task


Equipment



1



1 Pyrometer and UHC Probe

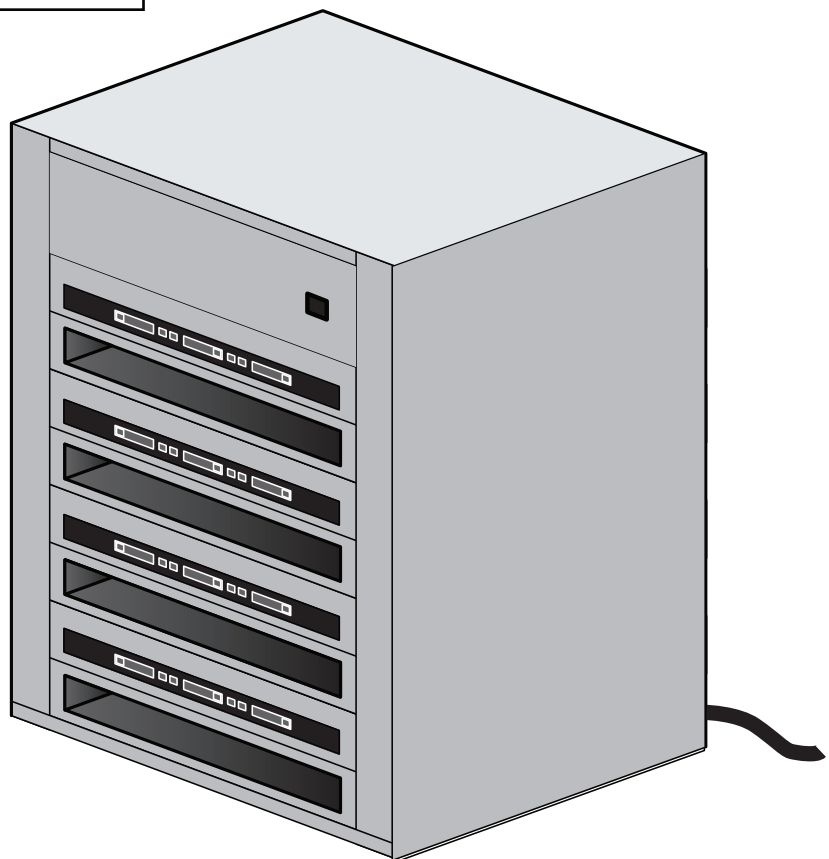


1



Plug in the unit at the main socket. Turn the power switch to ON. Allow the unit to warm up for 25 minutes.

NB

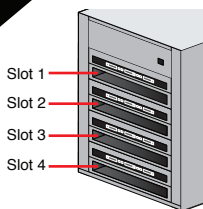

Slot 1
Slot 2
Slot 3
Slot 4

2



Temperature Key

After 25 minutes, press the Temperature Key to ensure the optimum temperature is reached. NB Breakfast 79°C/Main Menu 93°C.

3




Place the UHC Probe into one of the slots, touching the surface of the Plate you want to measure.

4



The UHC Probe should be placed in the centre of the Plate to attain an accurate reading.

5

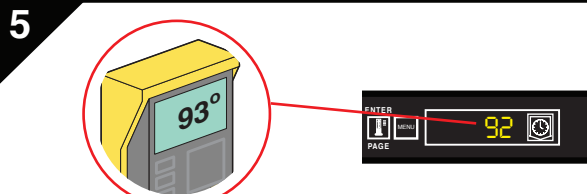

Allow the pyrometer reading to stabilise. The temperature on the Pyrometer should be within $\pm 3^\circ\text{C}$ of the temperature reading on the UHC.

6



Temperature Key x1



Temperature Key x2

Press the Temperature key once for Top Plate reading and twice for the Bottom Plate.

7



Menu Key (5 sec)

Temperature Key

If the reading is out of tolerance press the Menu Key for at least 5 seconds. Press the Temperature Key, PROG MODE will appear on the display. Press the Temperature key until VIEW ____ Page appears on the display.

8



Press Menu Key until SECR LOCK ____ is displayed. Enter the Service Code 247 using the Up and Down Keys.

9



Temperature Key

Press the Temperature Key until the SLOT ____ 1 is displayed.

10



Menu Key

Press the Menu key until the Top or Bottom OFST is displayed for adjustment. This is the amount the temperature needs adjusting to match the pyrometer reading.

11



Up/Down Arrows

Press the Up/Down Keys to enter the correct offset temperature. Up arrow to increase or down arrow to decrease the temperature 1° at a time. NB To view or adjust other slots whilst in programme repeat steps 9-11.

12



Menu Key (5 sec)

Press the Menu Key for 5 seconds to exit the programme.