

Microwave Amana 1000/1100

Card No. MC096

Perform Efficiency Test

Frequency

Monthly

Models

Amana 1000;1100

Estimated Time to Complete

10 Minutes

Health & Safety Hazards

Food Safety




Wash and dry hands **after** performing this task




Inspect equipment. Do not use if damaged


Equipment

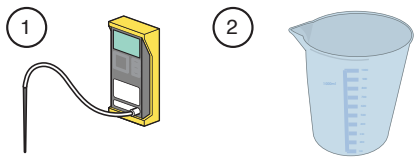

- 1 Pyrometer and needle Probe.
- 2 Microwave Efficiency Test Beaker

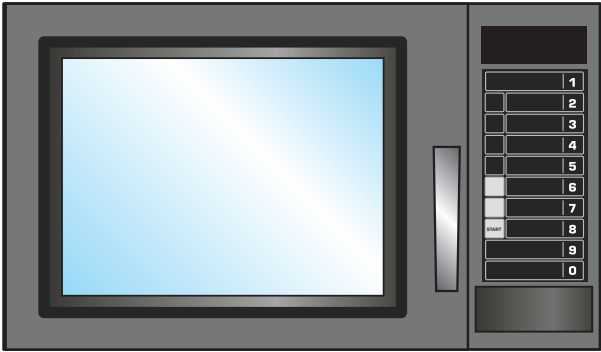


1

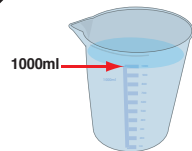

Fill the beaker to the 1000ml mark with cold water.

2

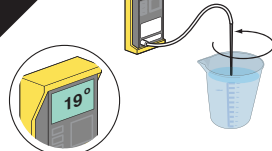

Stir the water with the needle probe until a temperature reading of at **18°C +/- 3°C** is achieved. Record the temperature.

3



Place the beaker in the centre of the microwave and activate on full power for 63 seconds.

4



Stir the water for 5 seconds and record the temperature with the needle probe. The difference between the cold water and the heated water temperature should be;

- 1000 watt 13-15°C
- 1100 watt 14-16°C

5



If the test fails perform a maintenance check on the unit using **PM Card MC097** and ensure the interior of the microwave is clean. Then repeat the test again following **steps 1-4**.

6



If the test fails again contact your catering [Service Company](#).